



DIY – PVC montage

200x2 mm bændler og 50 mm overlap


1. Brug søm eller stor hæftepistol

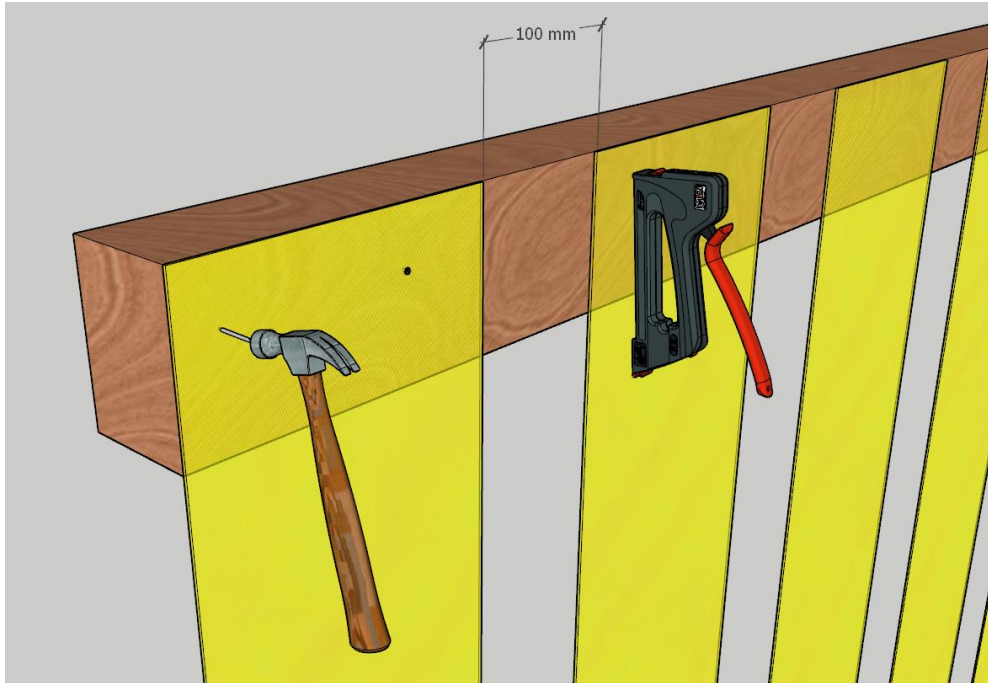

- 2.

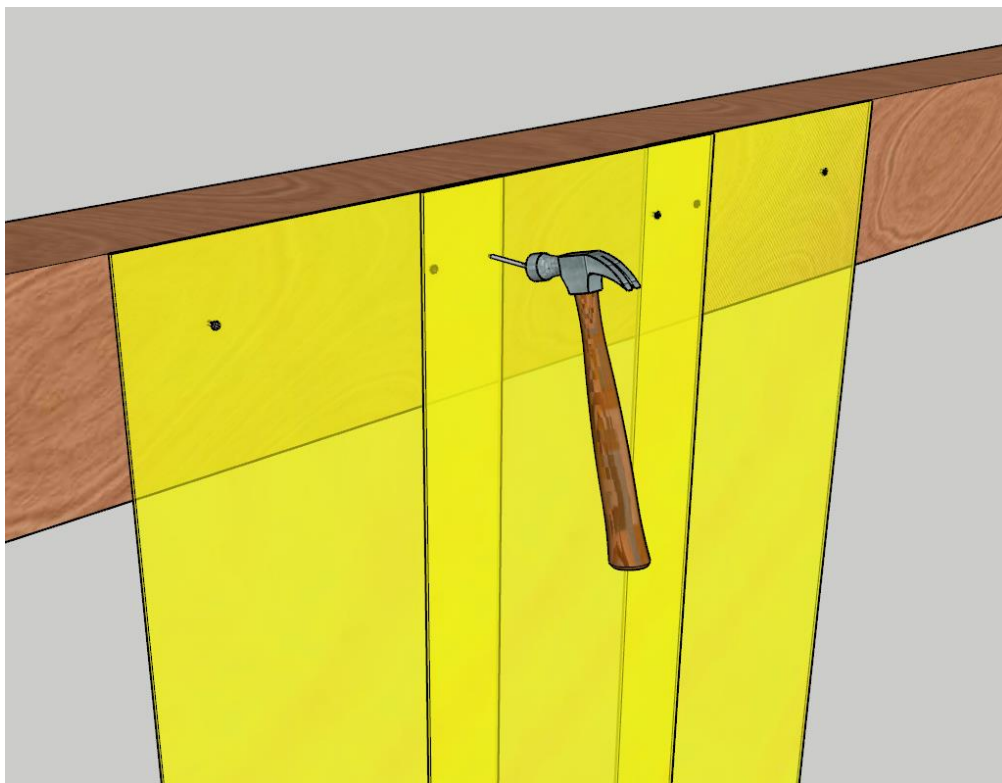

3.

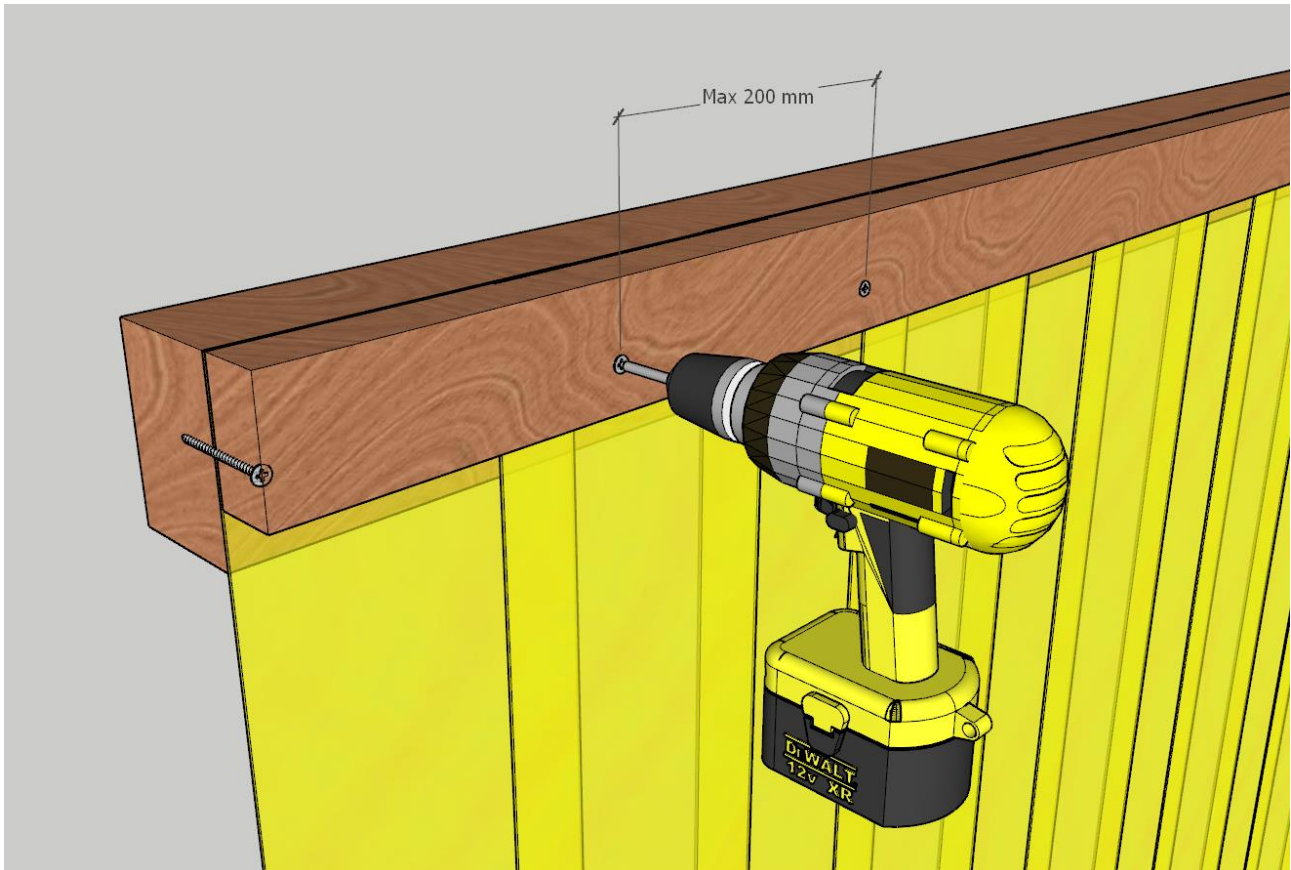

INDU  **DOOR**

For support ring: 30 12 71 61